




LN-QE-RS35-LRF / LN-QE-RS50-LRF

ZEROING THE RETICLE


ZERO THE RETICLE QUICKLY

After the initial shot, observe the point of impact and adjust the reticle as follows:

1. Freeze the image.

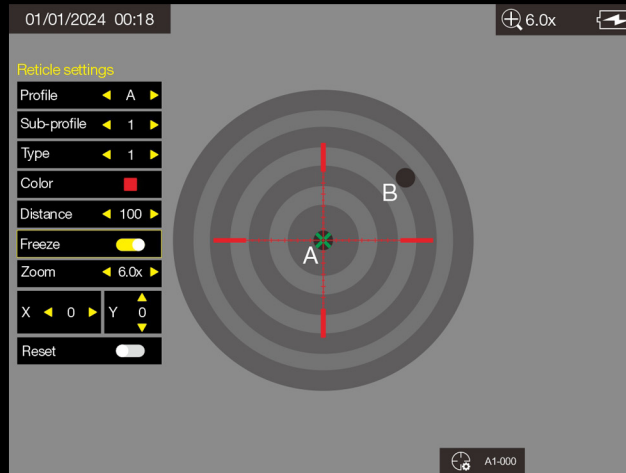

2. On the frozen image, move the green "x" mark along the X-axis and Y-axis until the "x" mark is precisely aligned with the initial shot's point of impact.

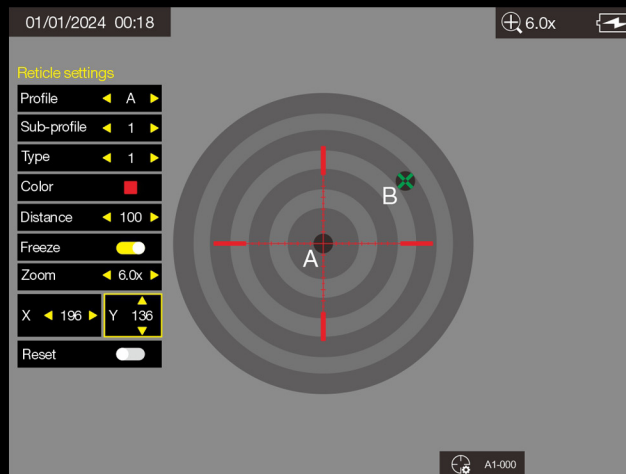

3. The reticle has been zeroed. Save the position as a profile. The user can save and recall up to 25 different ballistic profiles.

