

THIS UPDATE APPLIES ONLY TO DEVICES WITH SOFTWARE VERSION 3.1 OR EARLIER.

TO FIND OUT WHICH SOFTWARE VERSION YOUR MONOCULAR HAS, PLEASE ACTIVATE THE MAIN MENU, SCROLL UNTIL “VERSION” AND SHORT-PRESS THE MULTI-CONTROLLER. IF IT SHOWS “M5 V3.2” OR HIGHER VERSION – STOP! YOU DO NOT NEED THIS UPDATE. IF IT SHOWS “M5 V3.1” OR EARLIER VERSION – PLEASE PROCEED WITH AN UPDATE

The instructions for software update download and micro-SD card format are as follows:

1. Download the .bin file onto your computer
2. Remove the micro-SD card from the device, insert it in your computer and copy the attached file onto the card (file must be copied in main/root directory - not in any folders).
NOTE: if you have any files on your micro-SD card, please transfer them to your computer now, because they will be deleted in the end (after update process is finished you will need to format the card).
3. Insert the micro-SD card back into the unit and turn the device ON
4. Allow the update to run (on some models LED lights will be flashing on and off for some time (on other models the LED lights will be dim for some time) and after update is done the device will turn on).
5. When the device turns ON, press and hold the Super Controller button for 1.5-2sec – menu will appear – scroll down/up the menu with the Super Controller Wheel until you see Format – short press the Super Controller button to select it, then scroll down to OK and short press to format the card. **NOTE: if you do not format the card the update will run again next time you power the device ON.**

If you have any questions, please call us at 1-972-722-1100 or e-mail us at info@lunaoptics.com